



Read this before assembly!

Carfully check for dirt and particles in all pipes and hoses. Also check for dirt inside the filter. At smallest hesitation, clean and wipe everything thoroughly before assembly!

Check hoses for deformations, cracks or other leakage. The clamps should be in good condition or to be replaced. Please note, when fitting BSR air filter, do not tighten the air filter to hard, be gentle. Check before and after testdrive that everything are tight and firm.



MONTERINGSANVISNING

Volvo S60 2001> Volvo V70 1999>

Förslag på verktyg:


- Extender, Socket 10 mm
- Hose clamp screwdriver 7mm
- Phillips screwdriver
- Torx screwdriver



1. Disassembly: Inlet pipe (1), electrical plug (2) for MAS (mass air sensor), MAS (3) from air filter box (4).



2. Disassemble the magnetic valve (1) and the hose (2) from the air filter box.

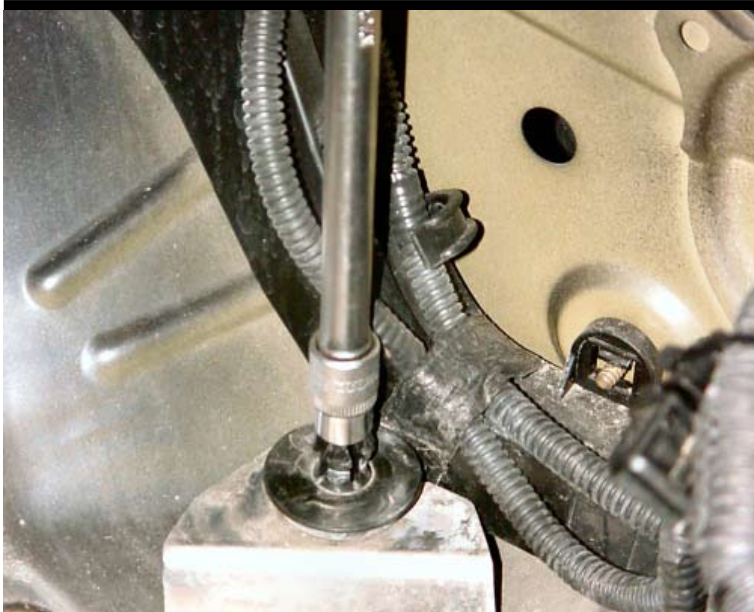

3. Disassemble the air filter box by using a 10 mm socket attach to an extender (3 attachment points).



4. Disassemble the screw (1) for the fuse box. Assemble the clips (supplied), holding the MAS on the heat shield. Assembly: Fit the heat shield into the original attachment suspension and attach the screw to the fuse box. Attach the MAS to the heat shield with the supplied screws. Mount the BSR air-filter, electrical plug to MAS and inlet pipe. Attach the magnetic valve as picture shows. Use the supplied bracket (2).